


Instruction for White Ink Cartridge

Please read the instruction before use.

1. The white ink cartridge must be stored in “Nozzle Up” to keep the nozzles healthy.
2. To maintain optimum printing conditions, before installing it in a printer, shake it up and down for 30 seconds as shown in the picture.

NOTE : Please do not shake the cartridge strongly, it might cause the ink cartridge damage.

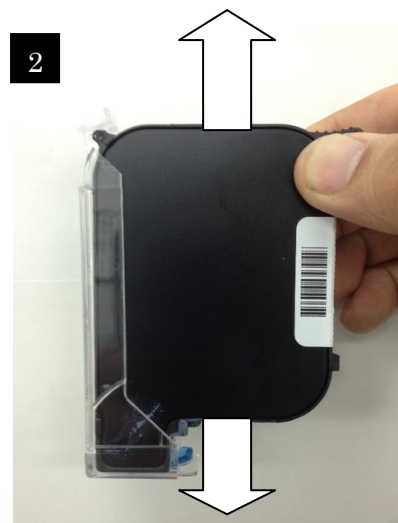

3. After shaking the cartridge, please remove the clip and wipe excess ink with a lint-free dry cloth from the print head facing down.

NOTE 1: DO NOT USE a cloth with WATER.

NOTE 2: When the cartridge is dirty with the ink, clean the print head with a lint- free cloth moistened with isopropyl alcohol.



4. Please test the cartridge performance before running it.



5. After every use, to prevent nozzles drying out, wipe excess ink again with a lint-free dry cloth and attach the original clip to the cartridge. Make sure the cartridge is stored in "Nozzle Up".



<General caution>

1. The whiteness may vary during printing due to the nature of the ink.
2. White ink cartridge may show nozzle missing on daily use. Please shake and wipe the cartridge by following this instruction when it happens.

GENERAL

The instruction ends here.

NOTE: What if happen print missing?

1. If print missing like photo 6 is happened during the print job, please take out the cartridge and place a clip on it.



2. Then, turn the nozzles upwards like photo 7 and shake it for 30 seconds. After that, take out the clip and wipe excess ink with a lint-free dry cloth from the print head facing down.



3. Please attach the ink cartridge on the printer and check the recovery of print result before use.

